





FOLLOW THE INSTRUCTIONS TO REMOVE OR REPLACE THE MEMORY CHIP (EPROM)




Place the DME/ ECU on a flat work area, turn the unit over so that you can see the metal tabs holding the top cover.

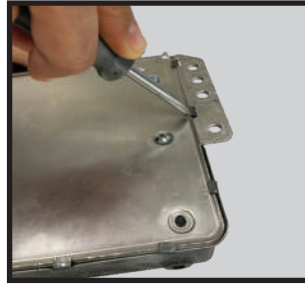


Gently wedge the flat screwdriver on the metal tabs and lift them slowly.

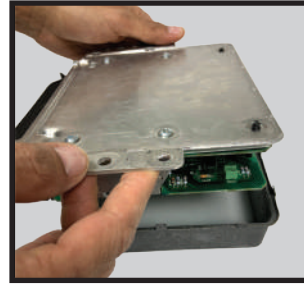


After lifting the 10 tabs, the top cover will be released. Leave the top cover aside for now.

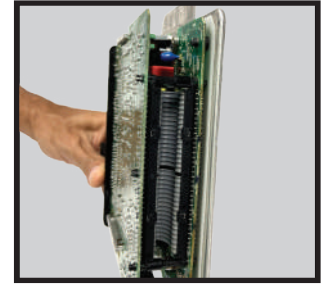

Hold the DME/ ECU as shown in the image.

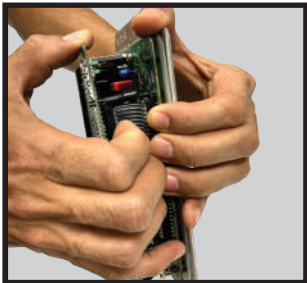


Place your fingers between the upper and lower circuit boards, carefully pull both boards apart. (Apply uniform pressure to perform this operation)

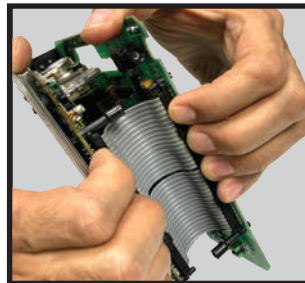


NOTE: Do not use excessive force or pull the boards too far apart to prevent damage to the ribbon cable.




When the upper and lower circuit boards are separated, hold the upper board as shown in the image.

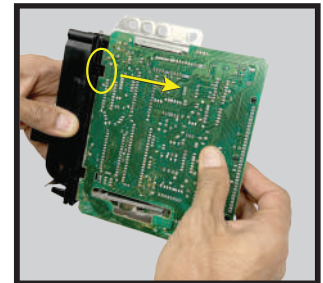


Gently pull up and back; you will see the front of the top board unlocked from the black DME/ ECU connector.

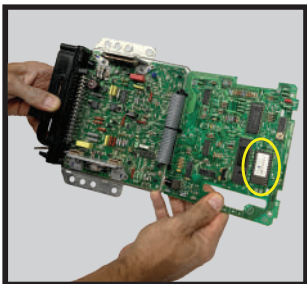

Once the board releases you can fold open the top board and see the Chip.

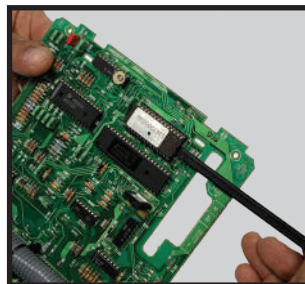


Locate the factory chip, observe the position and using the plastic spudger, insert it between the chip and the socket.

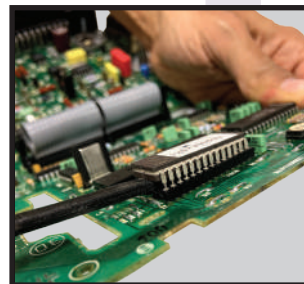


Alternate the movement of the spudger at the opposite ends until the chip is released from the socket.



NOTE: Be sure not to pry the socket from the circuit board, just remove the chip from the socket.

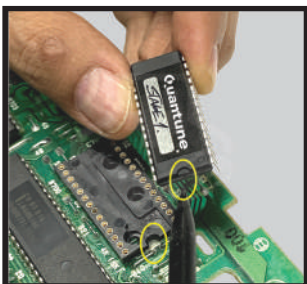

Install the performance chip making sure that the orientation of the small notch matches the socket on the circuit board.

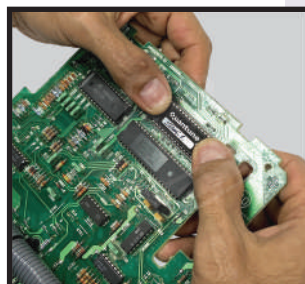

Install one side or row of pins in the socket halfway, push gently and make sure that the opposite row of pins aligns with the socket; once the two rows of pins are seated inside each socket, press down to hold the chip in place.



The performance chip is installed, follow the steps in reverse order to close the top circuit board and the top cover of the DME/ ECU. Then, reinstall the DME/ ECU back in the car. Enjoy the extra power !